

COMBI-CAMP Driving tarpaulin

Start at the front of the trailer and make sure the corners are positioned correctly:



Attach the black hooks and rubbers to the corners:



The sides have to be fixed by black elastics to 3 buttons on each side (ask your dealer if your trailer doesn't have these buttons):



Use the elastics with hooks at the rear and attach them to the chassis:




Warnings:

The tarpaulin should fit tightly around the trailer to avoid ballooning.

All hooks should be fastened and the tarpaulin should cover the entire side to avoid damage to the side panels of the trailer.

Driving over 100 KM/H with the tarpaulin on might cause damage to the trailer or the tarpaulin.

Contents provided in the bag:

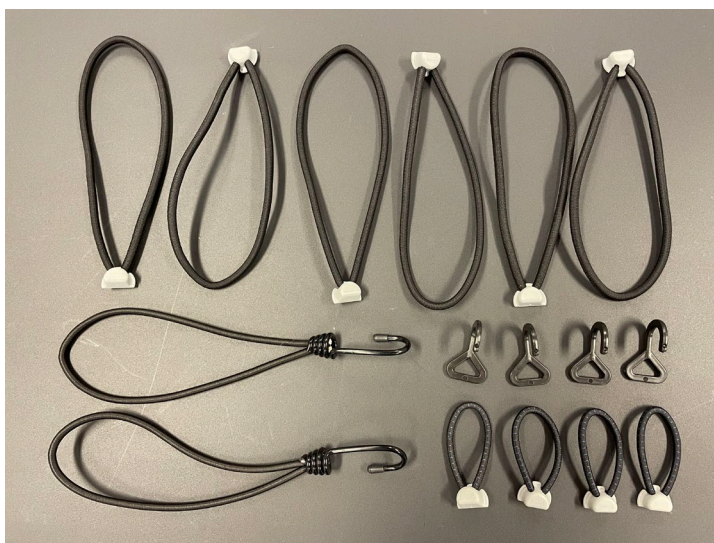

For Valley – Country before 2016 you will need 6 x isaflex and hook extra, and you will not need the long black elastics. The black elastics with hook have to be attached to the support feet:

